

# Download Hearthware Flavor Wave Oven Manual

Flavor Wave Oven. How to Open Heat Control Assembly and Dome Assembly Make sure the heater control assembly is tightly locked into the dome, then the whole assembly can be easily opened and put aside as shown in steps 1, 2 and 3: Place dome holder under either side of base handle. MakeIf you want the rice or noodles softer, cover with foil and add a sprinkle of water. EASY START: Oven is preset to cook at Power Level 10. To start cooking, press COOK TIME button, enter time required, press START. If cooking at any other power level other than HI(10), Power Level button will be needed.Flavor Wave Oven. How to Open Heat Control Assembly and Dome Assembly Make sure the Heat Control assembly is tightly locked into the dome, then the Heat Control Assembly and Dome Assembly can be easily opened and put aside as shown in steps 1, 2 and 3: Place dome holder under either side of base handle. Make sure both feet of the dome holderowner's manual flavorwave oven™ deluxe flavorwave oven™ deluxe owner's manual important tips: warning 1. Check the power source for proper operation. Do not operate the unit Do not place the power head on or close to any flammables with other major appliances in the same power outlet.